

Home  
PBXware  
SERVERware  
TELCOware  
SIPmon  
SIPProt  
Desktop & Mobile  
BRM  
UADs  
Appliances  
EOL

## From Bicom Systems Wiki

To enable directory on your server you will have to navigate to **Settings → Servers/Tenants** and edit **Server/Master Tenant**. Once in edit screen, scroll down to **General Settings** section and enable **Show Directory in OSC**.

Click on the **Save** button to save changes.

**General Settings**

**Announce Trunks:**  Yes  No  N/A

**Absolute Timeout:**

**Voicemail in CDRs:**

**FAX page format:**

**FAX file type:**

**Routing mode:**

**Default domain for OSC login:**

**Find E.164 numbers in DIDs:**  Yes  No  N/A

**Number of objects per page (Default: 10):**

**Show Directory in OSC:**  Yes  No  N/A

Now, when you have directory enabled on a system level you also need to edit each of your extensions to allow them to access directory and to be visible when other extensions are browsing through it.

To do that, edit your **Extensions**, click **Advanced Options** and in **General** field set **Show in Directory** option to **Yes**.

Click on the **Save** button to save changes.

**General**

<b>Extension:</b>	<input type="text" value="101"/>	✓
<b>Title:</b>	<input type="text"/>	
<b>Name:</b>	<input type="text" value="Test"/>	✓
<b>E-mail:</b>	<input type="text" value="test@bicomsystems.c"/>	✓
<b>Location:</b>	<input type="text"/>	
<b>Department:</b>	<input type="text" value="x None"/>	✓
<b>User Type:</b>	<input type="text" value="friend"/>	✓
<b>DTMF Mode:</b>	<input type="text" value="rfc2833"/>	✓
<b>RFC2833 Compensate (1.2):</b>	<input type="radio"/> Yes <input type="radio"/> No <input checked="" type="radio"/> N/A	
<b>Context:</b>	<input type="text" value="default"/>	✓
<b>Status:</b>	<input type="text" value="Active"/>	✓
<b>Music on Hold:</b>	<input type="text" value="default"/>	
<b>Show In Directory:</b>	<input checked="" type="radio"/> Yes <input type="radio"/> No <input type="radio"/> N/A	

**NOTE:** To enable deskphones to use Directory phone **must be autopvisioned**.

Retrieved from "[http://wiki.bicomsystems.com/HOWTO\\_Enable\\_Directory](http://wiki.bicomsystems.com/HOWTO_Enable_Directory)"