

Home  
PBXware  
SERVERware  
TELCOware  
SIPmon  
SIPProt  
Desktop & Mobile  
BRM  
UADs  
Appliances  
EOL

## From Bicom Systems Wiki

1. Login to the PBXware administration.
2. Navigate to **Monitor: Extensions**.
3. Check the box next to the Extension you wish to listen to.
4. Click on the "**Monitor**" button and enter the "**Extension**" in the provided window with which to listen to an active call at previously selected extension.
5. Click on "**OK**"

Retrieved from "[http://wiki.bicomsystems.com/HOWTO\\_Listening\\_to\\_Active\\_Conversations](http://wiki.bicomsystems.com/HOWTO_Listening_to_Active_Conversations)"